

# Instructions for Scoreboard Clock

(Model #0028M)

## Adjustment Buttons

(These buttons are located on the back of the unit.)

- A** Set button
- B** Upward Adjust
- C** Downward Adjust
- D** Activate

## Setting the Clock:

When setting the clock for the first time, follow all directions in order.

1. **Set the year:** Push button A and the 4-digit year will flash. Adjust the year by using buttons B or C.
2. **Set the date:** Push button A and the month will flash. Adjust the month by using buttons B or C. Push button A again and the day will flash. Adjust the day by using buttons B or C.
3. **Set the time:** Push button A and the hour will flash. Adjust the hour by using buttons B or C. Push button A again and the minutes will flash. Adjust the minutes by using buttons B or C.
4. **Activate the unit:** Push button D to activate the clock.

Note: The temperature is pre-set and will adjust automatically.

## Changing from the 12 to 24 hour time format:

1. Hold the B button down for 3 seconds to switch between the 12/24 hour time formats.